

Quick Start Guide - CB-135



1. WICK a candle-approved jar.


155°F




2. MELT CB-135 to at least 155° F (68.3°C).



3. Use CB-135 COMPATIBLE fragrances and dyes.

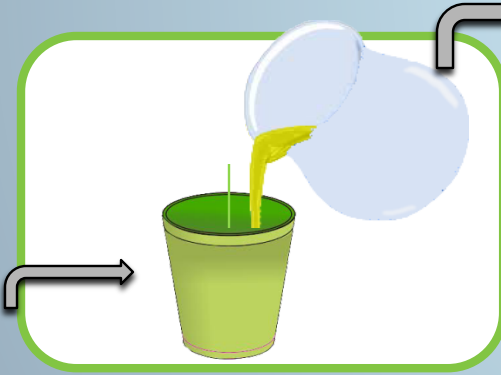

4. Generally POUR at 140°F (60°C).

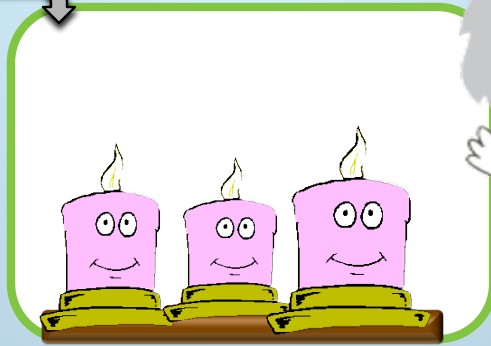

5. COOL ideally at 68-75°F (20-23.9°C), spaced ½ inch apart.



CB-135



**Please refer to the full product instructions available at www.ngiwax.com